

# Датчики дождя (осадкомеры) DELTA ОНМ HD2016

## Технические характеристики

|                                    |                                   |  |                                       |                                 |
|------------------------------------|-----------------------------------|--|---------------------------------------|---------------------------------|
| <b>Архангельск</b> (8182)63-90-72  | <b>Ижевск</b> (3412)26-03-58      | <b>Магнитогорск</b> (3519)55-03-13     | <b>Пермь</b> (342)205-81-47           | <b>Сургут</b> (3462)77-98-35    |
| <b>Астана</b> (7172)727-132        | <b>Иркутск</b> (395)279-98-46     | <b>Москва</b> (495)268-04-70           | <b>Ростов-на-Дону</b> (863)308-18-15  | <b>Тверь</b> (4822)63-31-35     |
| <b>Астрахань</b> (8512)99-46-04    | <b>Казань</b> (843)206-01-48      | <b>Мурманск</b> (8152)59-64-93         | <b>Рязань</b> (4912)46-61-64          | <b>Томск</b> (3822)98-41-53     |
| <b>Барнаул</b> (3852)73-04-60      | <b>Калининград</b> (4012)72-03-81 | <b>Набережные Челны</b> (8552)20-53-41 | <b>Самара</b> (846)206-03-16          | <b>Тула</b> (4872)74-02-29      |
| <b>Белгород</b> (4722)40-23-64     | <b>Калуга</b> (4842)92-23-67      | <b>Нижний Новгород</b> (831)429-08-12  | <b>Санкт-Петербург</b> (812)309-46-40 | <b>Тюмень</b> (3452)66-21-18    |
| <b>Брянск</b> (4832)59-03-52       | <b>Кемерово</b> (3842)65-04-62    | <b>Новокузнецк</b> (3843)20-46-81      | <b>Саратов</b> (845)249-38-78         | <b>Ульяновск</b> (8422)24-23-59 |
| <b>Владивосток</b> (423)249-28-31  | <b>Киров</b> (8332)68-02-04       | <b>Новосибирск</b> (383)227-86-73      | <b>Севастополь</b> (8692)22-31-93     | <b>Уфа</b> (347)229-48-12       |
| <b>Волгоград</b> (844)278-03-48    | <b>Краснодар</b> (861)203-40-90   | <b>Омск</b> (3812)21-46-40             | <b>Симферополь</b> (3652)67-13-56     | <b>Хабаровск</b> (4212)92-98-04 |
| <b>Вологда</b> (8172)26-41-59      | <b>Красноярск</b> (391)204-63-61  | <b>Орел</b> (4862)44-53-42             | <b>Смоленск</b> (4812)29-41-54        | <b>Челябинск</b> (351)202-03-61 |
| <b>Воронеж</b> (473)204-51-73      | <b>Курск</b> (4712)77-13-04       | <b>Оренбург</b> (3532)37-68-04         | <b>Сочи</b> (862)225-72-31            | <b>Череповец</b> (8202)49-02-64 |
| <b>Екатеринбург</b> (343)384-55-89 | <b>Липецк</b> (4742)52-20-81      | <b>Пенза</b> (8412)22-31-16            | <b>Ставрополь</b> (8652)20-65-13      | <b>Ярославль</b> (4852)69-52-93 |
| <b>Иваново</b> (4932)77-34-06      | <b>Киргизия</b> (996)312-96-26-47 | <b>Казахстан</b> (772)734-952-31       | <b>Таджикистан</b> (992)427-82-92-69  |                                 |

Единый адрес для всех регионов: [dmh@nt-rt.ru](mailto:dmh@nt-rt.ru) || [www.deltaohm.nt-rt.ru](http://www.deltaohm.nt-rt.ru)

## HD2016



### HD2016 WEIGHING RAIN GAUGE

HD2016 is a rain gauge that detects the weight of the rainfall collected by a 400 cm<sup>2</sup> inlet. The sensor is a load cell located at the base of the rainfall collecting reservoir. The signal of the load cell is processed by the internal electronic board of the rain gauge in order to output the information on the rainfall.

Many acquisition systems can be connected to the rain gauge thanks to the multiplicity of outputs available:

- RS485 with MODBUS-RTU or proprietary ASCII protocol output
- SDI-12 output
- Voltage-free pulse contact output

Delta OHM offers a wide range of data logger systems for gathering the data collected by the rain gauge. HD2016 is able to provide the total rainfall, the partial rainfall (from the last reset command or from the last reading command), the average rainfall rate in the last minute and in the last hour.

The measured rainfall is regularly saved into a non-volatile memory, which retains the information even in case of power failure.

The automatic discharge of the rainfall collected allows using a compact and lightweight structure for the installation of the rain gauge.

So as to ensure accurate measurement even with low temperature climatic conditions, a version with heating which is automatically activated below +4 °C has been developed (HD2016R) so that snow deposits and ice formations are prevented. Adding anti-freeze or oil in the rainfall collecting reservoir is not required.

If the discharge of the water collected takes place during a rainfall, a retention valve, located at the top of rain gauge, temporarily holds the current rainfall, so to avoid losing the amount of rainfall that falls while discharging.

The rain gauge is equipped with sophisticated features that allow reducing the effects of wind, ensuring a better accuracy and stability of the measurement. An NTC temperature sensor allows keeping under control the internal temperature of the instrument.

The corrosion resistant materials used and the absence of moving parts guarantee a reduced maintenance and a long operating life. The rainfall collecting parts are treated with a non-adherent product for a better water flow.

The rain gauge is factory calibrated and ready for use. A self-diagnostic system periodically checks the correct operation of the instrument and reports any anomalies.


The rain gauge requires 10...15 Vdc power supply.

**When submitting your order**, upon request a bird spike, made of eight 3 mm diameter spikes, 60 mm in height, can be installed on the rain gauge.


The wire mesh filter prevent obstruction of water flow by leaves or branches. It should be cleaned regularly. No need for math algorithms to compensate for the weight due to leaves, branches or other solid objects.



view from below

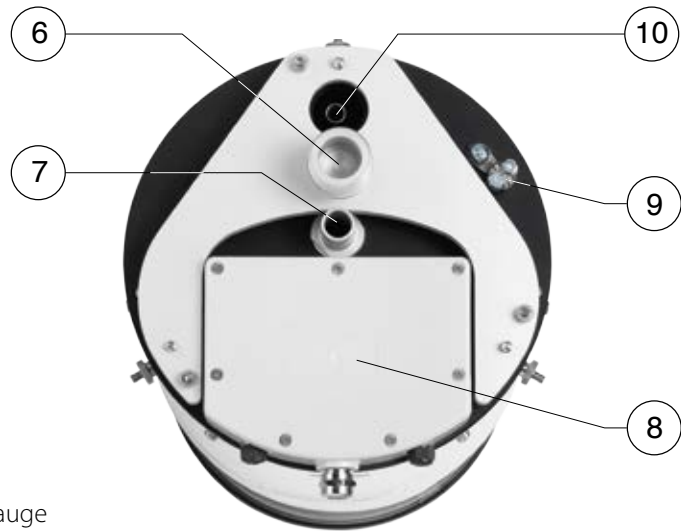

1. Optional flange for the installation of the rain gauge raised above ground.
2. Electronic board housing.
3. M12 connector for the connection of the measuring circuit power supply and signals.
4. Optional support rod for the installation of the rain gauge raised above ground.
5. Optional flat base for fixing the support of the rain gauge raised above ground.
6. Place for the support rod.
7. Discharge of the rainfall collected.
8. Cover of the electronic board housing. To access the electronic board, loosen the 7 screws that secure the cover.
9. Terminal for protective earth connection.
10. Overflow drain.
11. Optional cable for the connection of the measuring circuit power supply and signals.
12. Cable gland for the heater power supply.
13. Port reserved for technical service.
14. Screws for fixing the cylindrical cover.
15. Cylindrical cover.

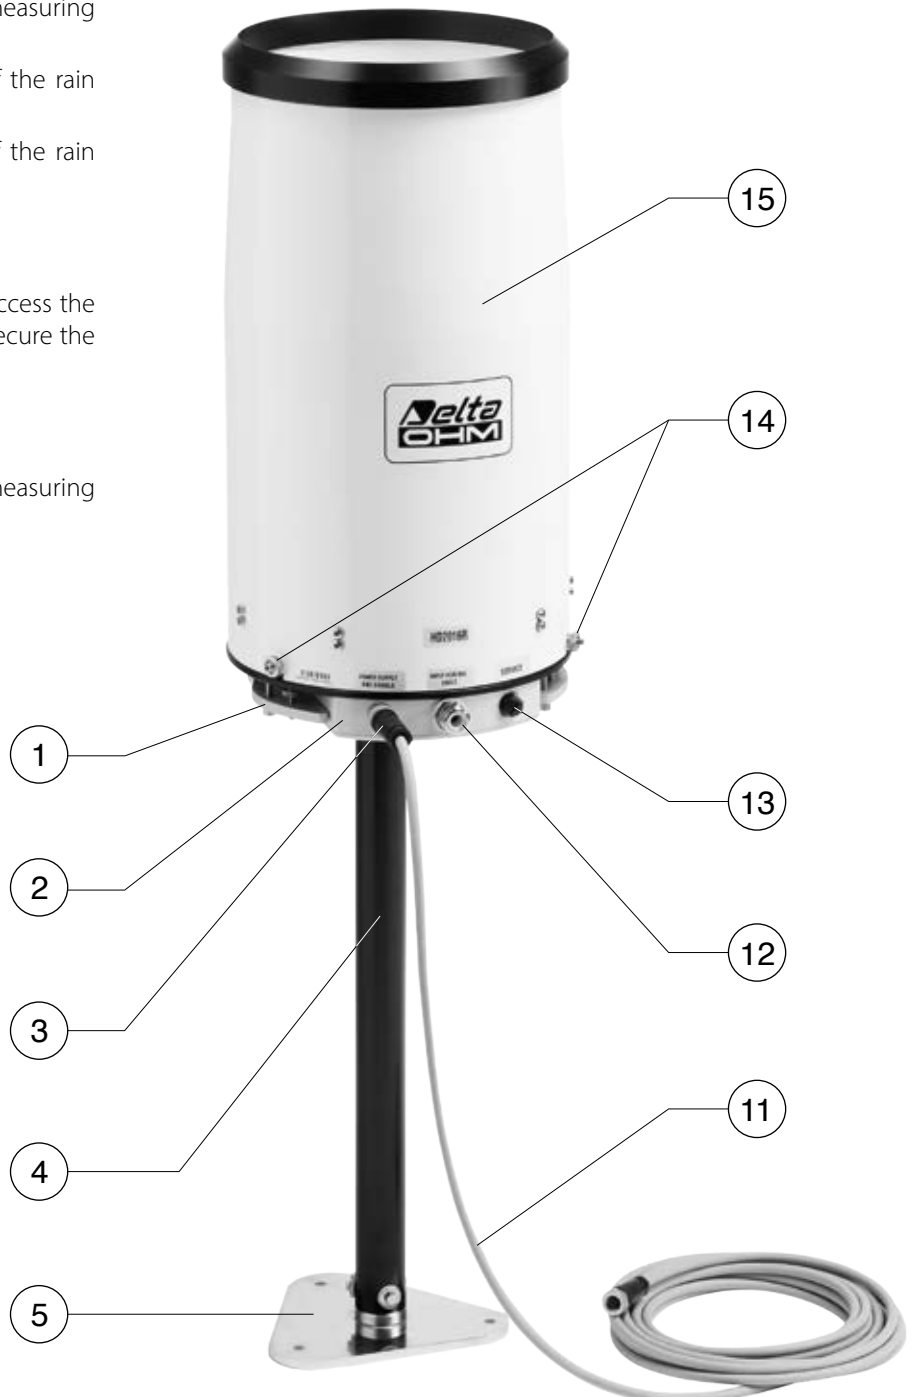

## TECHNICAL SPECIFICATIONS


|   |   |
|---|---|
| <b>Power supply</b>   | Measuring circuit: 10...15 Vdc<br>Heater: 12 Vdc $\pm$ 10% (only HD2016R)   |
| <b>Consumption</b>  | Measuring circuit: $\approx$ 20 mA (1.5 A while discharging, typically for less than 1 minute with 300 cc and maximum 5 minutes with full reservoir)<br>Heater: 90 W (only HD2016R) |
| <b>Contact output</b>                                       | Isolated NO (Normally Open) contact ( $R_{ON} \approx 1 \text{ k}\Omega$ , $T_{ON} \approx 60 \text{ ms}$ )   |
| <b>Digital outputs</b>                                      | RS485 with Modbus-RTU or ASCII proprietary protocol<br>SDI-12   |
| <b>Resolution</b>   | Rainfall: 0.001 mm<br>Weight: 1 mg<br>Rate: 0.001 mm/h or 0.001 mm/min<br>Temperature: 0.1 °C   |
| <b>Accuracy</b>   | Rainfall: $\pm$ 0.2 mm (wind speed < 30 m/s)<br>Temperature: $\pm$ 1 °C   |
| <b>Maximum rainfall rate</b>                                | 1000 mm/h   |
| <b>Operating temperature</b>                                | 0...+70 °C without heating<br>-20...+70 °C with heating (only HD2016R)  |
| <b>Heater intervention temperature</b>                      | +4 °C (only HD2016R)  |
| <b>Reservoir capacity</b>                                   | The automatic discharge of the 3000 cc reservoir allows seamless rainfall measurement.  |
| <b>Protection degree</b>                                    | IP 64   |
| <b>Collector area</b>                                       | 400 cm <sup>2</sup>   |
| <b>Minimum section of the wires of the connecting cable</b> | Measuring circuit: 0.7 mm <sup>2</sup> (AWG 19)<br>Heater: 2.5 mm <sup>2</sup> (AWG 13, only HD2016R)   |

## INSTALLATION

The rain gauge can be installed on the ground or raised 500 mm above the ground. Other sizes above the ground are available on request.


For ground installation, three adjustable support feet, so that the instrument can be levelled correctly, and holes for fixing to the floor have been provided.

### RAIN GAUGE GROUND INSTALLATION

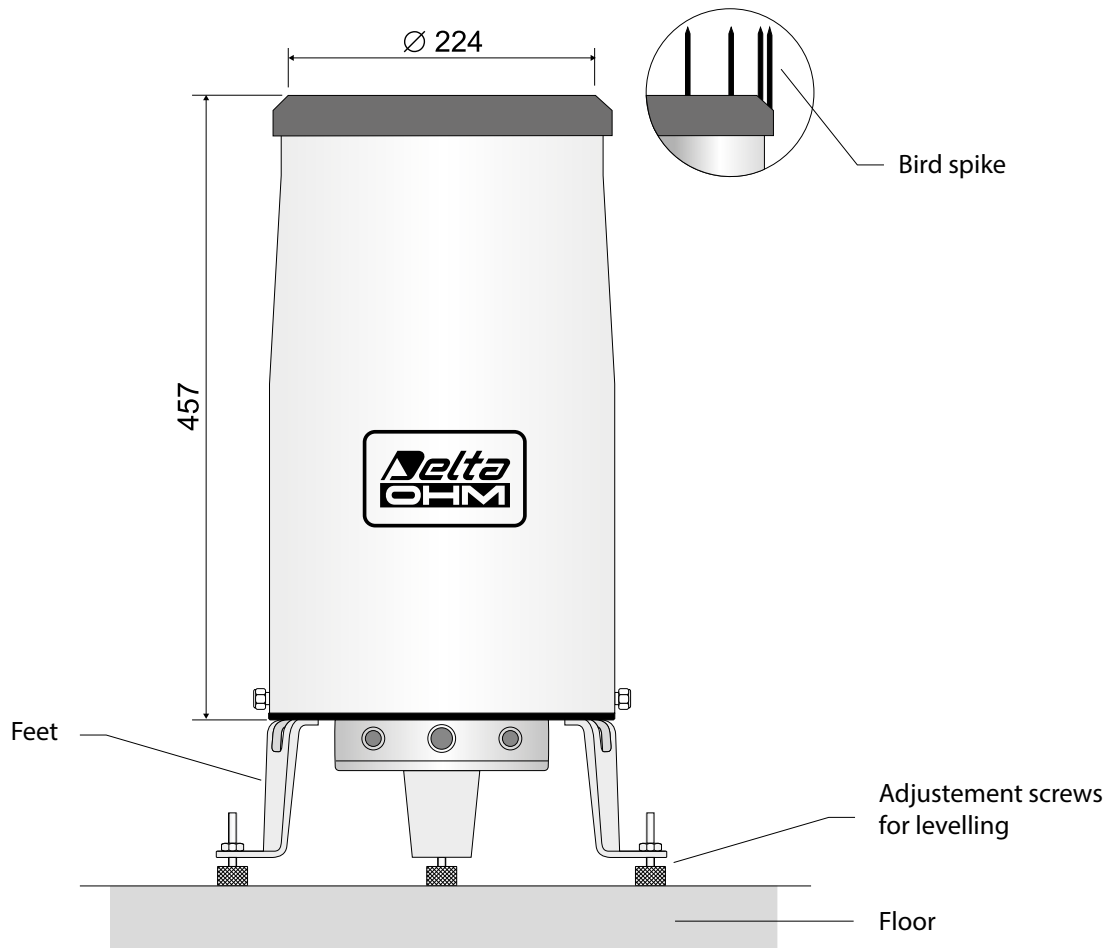

For raised installations, a flange to be fastened to the base of the instrument, and on which the support rod must be inserted, is provided. The rod may end with a flange so that it can be fixed to the floor.

### RAIN GAUGE INSTALLATION RAISED ABOVE GROUND

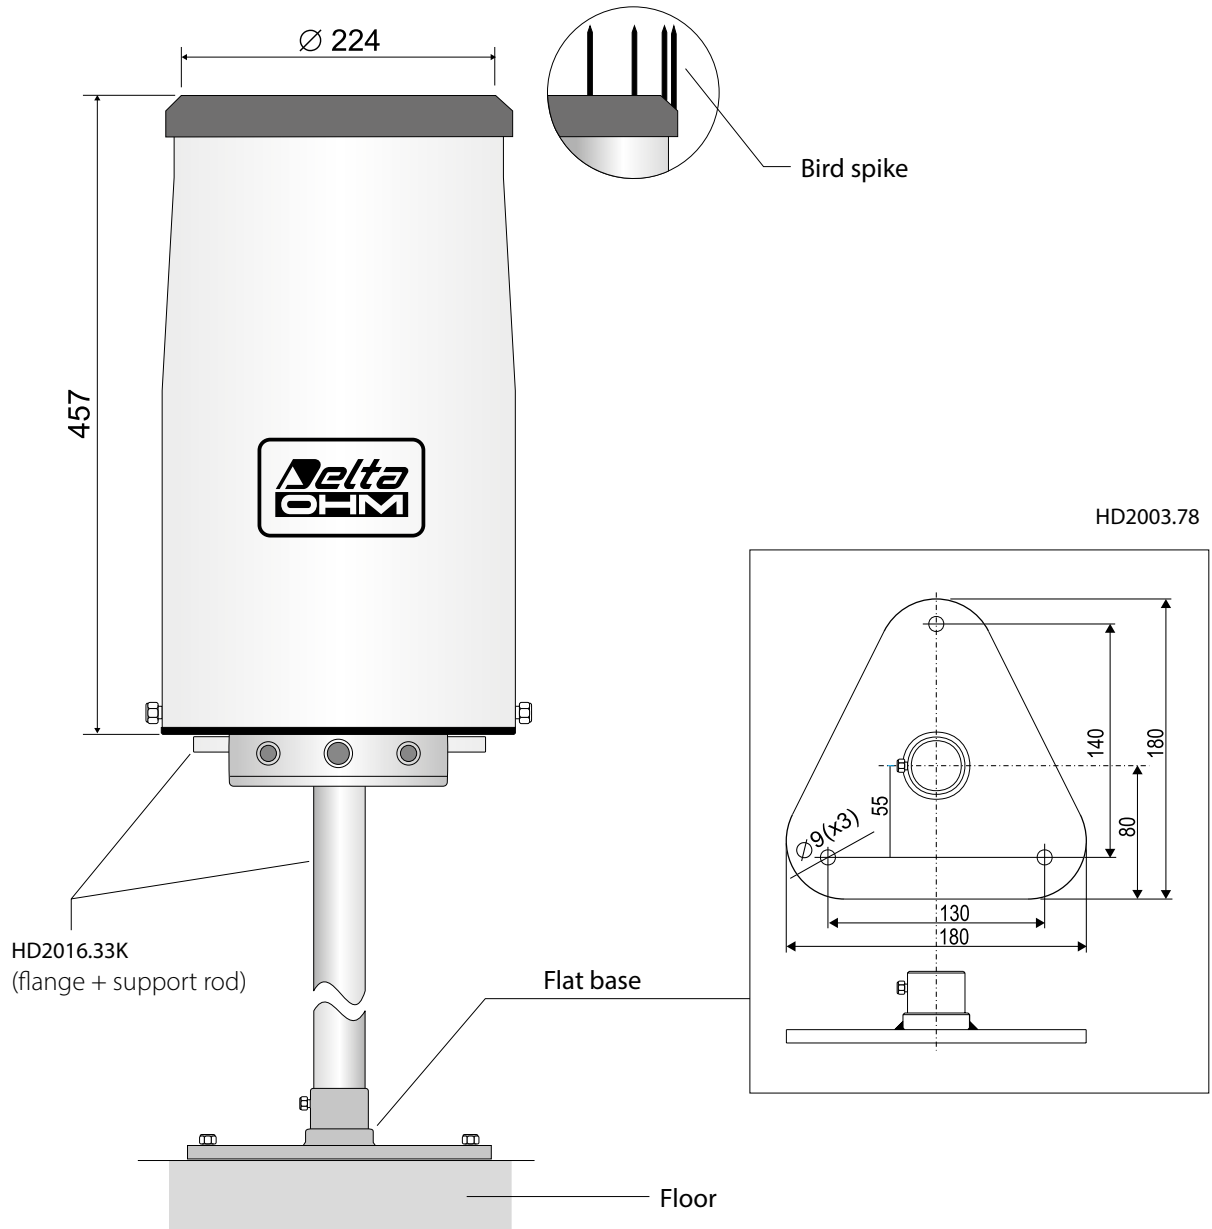

The base of the rain gauge is fitted with a bubble level to place the instrument perfectly levelled.

Bubble level



## CONNECTION

The measuring circuit power supply and the outputs (RS485, SDI-12 or contact) are connected via the male 8-pole M12 connector of the instrument. Use a cable with a female 8-pole M12 connector and 0.7 mm<sup>2</sup> (AWG 19) minimum wires section. Use a shielded cable over long distances. **Upon request, CP18... cables with 5 or 10 m standard length are available (other lengths available upon request).**

Instrument  
M12 male connector

CP18... cable



| Connector numbering | Function  | CP18... cable numbering         |
|---------------------|---|---------------------------------|
| 1                   | Measuring circuit power supply negative (GND)<br>SDI-12 output negative | 12, 7, 6<br>(wires in parallel) |
| 2                   | Measuring circuit power supply positive (+Vdc)                          | 1, 2, 4<br>(wires in parallel)  |
| 3                   | Not connected   |                                 |
| 4                   | DATA - (RS485)  | 9                               |
| 5                   | DATA + (RS485) or SDI-12 line   | 5                               |
| 6                   | 1 <sup>st</sup> pole of the voltage-free contact                        | 8                               |
| 7                   | Not connected   |                                 |
| 8                   | 2 <sup>nd</sup> pole of the voltage-free contact                        | 11                              |



## MODBUS INPUT REGISTERS

| Register address | Datum  | Format         |
|------------------|--|----------------|
| 0                | Content of the status register   | 16-bit integer |
| 1                | Not used   | 16-bit integer |
| 2,3              | Partial rainfall, in $\mu\text{m}$ , from the last reading command                 | 16-bit integer |
| 4,5              | Total rainfall in $\mu\text{m}$  | 16-bit integer |
| 6,7              | Partial rainfall, in $\mu\text{m}$ , from the last reset command                   | 16-bit integer |
| 8,9              | Average rainfall rate, in $\mu\text{m}/\text{min}$ , calculated in the last minute | 16-bit integer |
| 10,11            | Average rainfall rate, in $\mu\text{m}/\text{h}$ , calculated in the last hour     | 16-bit integer |
| 12,13            | Rain gauge internal temperature in $^{\circ}\text{C}$                              | 16-bit integer |
| 14,15            | Rainfall total weight (Pmg) in mg <sup>(*)</sup>                                   | 16-bit integer |
| 16,17            | Rainfall total weight, in mg, considering the evaporation (Wmg) <sup>(*)</sup>     | 16-bit integer |
| 18,19            | Weight, in mg, of the current reservoir content (Tmg) <sup>(*)</sup>               | 16-bit integer |
| 20,21            | Partial rainfall, in mils, from the last reading command                           | 16-bit integer |
| 22,23            | Total rainfall in mils   | 16-bit integer |
| 24,25            | Partial rainfall, in mils, from the last reset command                             | 16-bit integer |
| 26,27            | Average rainfall rate, in mils/min, calculated in the last minute                  | 16-bit integer |
| 28,29            | Average rainfall rate, in mils/h, calculated in the last hour                      | 16-bit integer |
| 30,31            | Rain gauge internal temperature in $^{\circ}\text{F}$                              | 16-bit integer |

The measures are signed 32-bit integer values. Two consecutive 16-bit registers must be accessed to read a measure.

Sequence to remove the cylindrical cover from the base of the rain gauge.







Removing the cylindrical cover



#### ORDERING CODES

**HD2016:** Weighing rain gauge, area 400 cm<sup>2</sup>, operating temperature from 0 °C to +70 °C. RS485 Modbus-RTU or SDI-12 output. Voltage-free contact (NO) output. Power supply: 10...15 Vdc. Adjustable feet for ground installation included.

**HD2016R:** Weighing rain gauge, area 400 cm<sup>2</sup>, with heater. Operating temperature from -20°C to +70 °C. RS485 Modbus-RTU or SDI-12 output. Voltage-free contact (NO) output. Power supply: 10...15 Vdc for the measuring circuit, 12 Vdc / 90 W for the heater. Adjustable feet for ground installation included.

**CP18.5:** 12-pole cable. Length 5 m. 8-pole M12 connector on one end, open wires on the other side.

**CP18.10:** 12-pole cable. Length 10 m. 8-pole M12 connector on one end, open wires on the other side.

**HD2013.18:** Bird spike.

**HD2016.33K:** Kit of accessories for the installation of the rain gauge raised 500 mm above ground.

**HD2016.33K.1:** Kit of accessories for the installation of the rain gauge raised 1 m above ground.

**HD2003.78:** Flat base for fastening the support of the rain gauge raised above ground.

#### Reservoir



|                                    |                                   |  |                                       |                                 |
|------------------------------------|-----------------------------------|--|---------------------------------------|---------------------------------|
| <b>Архангельск</b> (8182)63-90-72  | <b>Ижевск</b> (3412)26-03-58      | <b>Магнитогорск</b> (3519)55-03-13     | <b>Пермь</b> (342)205-81-47           | <b>Сургут</b> (3462)77-98-35    |
| <b>Астана</b> (7172)727-132        | <b>Иркутск</b> (395)279-98-46     | <b>Москва</b> (495)268-04-70           | <b>Ростов-на-Дону</b> (863)308-18-15  | <b>Тверь</b> (4822)63-31-35     |
| <b>Астрахань</b> (8512)99-46-04    | <b>Казань</b> (843)206-01-48      | <b>Мурманск</b> (8152)59-64-93         | <b>Рязань</b> (4912)46-61-64          | <b>Томск</b> (3822)98-41-53     |
| <b>Барнаул</b> (3852)73-04-60      | <b>Калининград</b> (4012)72-03-81 | <b>Набережные Челны</b> (8552)20-53-41 | <b>Самара</b> (846)206-03-16          | <b>Тула</b> (4872)74-02-29      |
| <b>Белгород</b> (4722)40-23-64     | <b>Калуга</b> (4842)92-23-67      | <b>Нижний Новгород</b> (831)429-08-12  | <b>Санкт-Петербург</b> (812)309-46-40 | <b>Тюмень</b> (3452)66-21-18    |
| <b>Брянск</b> (4832)59-03-52       | <b>Кемерово</b> (3842)65-04-62    | <b>Новокузнецк</b> (3843)20-46-81      | <b>Саратов</b> (845)249-38-78         | <b>Ульяновск</b> (8422)24-23-59 |
| <b>Владивосток</b> (423)249-28-31  | <b>Киров</b> (8332)68-02-04       | <b>Новосибирск</b> (383)227-86-73      | <b>Севастополь</b> (8692)22-31-93     | <b>Уфа</b> (347)229-48-12       |
| <b>Волгоград</b> (844)278-03-48    | <b>Краснодар</b> (861)203-40-90   | <b>Омск</b> (3812)21-46-40             | <b>Симферополь</b> (3652)67-13-56     | <b>Хабаровск</b> (4212)92-98-04 |
| <b>Вологда</b> (8172)26-41-59      | <b>Красноярск</b> (391)204-63-61  | <b>Орел</b> (4862)44-53-42             | <b>Смоленск</b> (4812)29-41-54        | <b>Челябинск</b> (351)202-03-61 |
| <b>Воронеж</b> (473)204-51-73      | <b>Курск</b> (4712)77-13-04       | <b>Оренбург</b> (3532)37-68-04         | <b>Сочи</b> (862)225-72-31            | <b>Череповец</b> (8202)49-02-64 |
| <b>Екатеринбург</b> (343)384-55-89 | <b>Липецк</b> (4742)52-20-81      | <b>Пенза</b> (8412)22-31-16            | <b>Ставрополь</b> (8652)20-65-13      | <b>Ярославль</b> (4852)69-52-93 |
| <b>Иваново</b> (4932)77-34-06      | <b>Киргизия</b> (996)312-96-26-47 | <b>Казахстан</b> (772)734-952-31       | <b>Таджикистан</b> (992)427-82-92-69  |                                 |

**Единый адрес для всех регионов: [dmh@nt-rt.ru](mailto:dmh@nt-rt.ru) || [www.deltaohm.nt-rt.ru](http://www.deltaohm.nt-rt.ru)**