

Модем GSM/ GPRS четырехдиапазонный беспроводной DELTA OHM HD53GSM

Технические характеристики

Архангельск (8182)63-90-72	Ижевск (3412)26-03-58	Магнитогорск (3519)55-03-13	Пермь (342)205-81-47	Сургут (3462)77-98-35
Астана (7172)727-132	Иркутск (395)279-98-46	Москва (495)268-04-70	Ростов-на-Дону (863)308-18-15	Тверь (4822)63-31-35
Астрахань (8512)99-46-04	Казань (843)206-01-48	Мурманск (8152)59-64-93	Рязань (4912)46-61-64	Томск (3822)98-41-53
Барнаул (3852)73-04-60	Калининград (4012)72-03-81	Набережные Челны (8552)20-53-41	Самара (846)206-03-16	Тула (4872)74-02-29
Белгород (4722)40-23-64	Калуга (4842)92-23-67	Нижний Новгород (831)429-08-12	Санкт-Петербург (812)309-46-40	Тюмень (3452)66-21-18
Брянск (4832)59-03-52	Кемерово (3842)65-04-62	Новокузнецк (3843)20-46-81	Саратов (845)249-38-78	Ульяновск (8422)24-23-59
Владивосток (423)249-28-31	Киров (8332)68-02-04	Новосибирск (383)227-86-73	Севастополь (8692)22-31-93	Уфа (347)229-48-12
Волгоград (844)278-03-48	Краснодар (861)203-40-90	Омск (3812)21-46-40	Симферополь (3652)67-13-56	Хабаровск (4212)92-98-04
Вологда (8172)26-41-59	Красноярск (391)204-63-61	Орел (4862)44-53-42	Смоленск (4812)29-41-54	Челябинск (351)202-03-61
Воронеж (473)204-51-73	Курск (4712)77-13-04	Оренбург (3532)37-68-04	Сочи (862)225-72-31	Череповец (8202)49-02-64
Екатеринбург (343)384-55-89	Липецк (4742)52-20-81	Пенза (8412)22-31-16	Ставрополь (8652)20-65-13	Ярославль (4852)69-52-93
Иваново (4932)77-34-06	Киргизия (996)312-96-26-47	Казахстан (772)734-952-31	Таджикистан (992)427-82-92-69	

Единый адрес для всех регионов: dmh@nt-rt.ru || www.deltaohm.nt-rt.ru

HD 53GSM



HD 53GSM QUAD-BAND GSM/GPRS MODULE

HD53GSM is a wireless quad-band GSM/GPRS modem. The module is controlled via standard RS232 serial interface and AT commands. It features:


- SIM card slot,
- SMA antenna connector,
- power line connector with remote on/off line,
- two status LED: the *POWER* LED is switched on when the GSM is powered, the *NET* LED indicates the connection status to the GSM net,
- RS232 Sub-D 9-pin connector.

Specifications:

Frequency band (MHz)	GSM850, GSM900, DCS1800, PCS1900
Output power	Class 4 (2W) @ GSM850 and GSM900 Class 1 (1W) @ DCS1800 and PCS1900
Antenna connector	Female SMA, 50 ohm
Interface	RS232, Sub-D 9-pin connector
SIM	1.8V and 3V SIM card slot
Power supply	8...28Vdc, with removable terminal block and ON/OFF pin
Operating temperature	-35...+80°C


Other features:

- Controllable via AT commands
- TCP/IP stack integrated
- Power Saving Mode

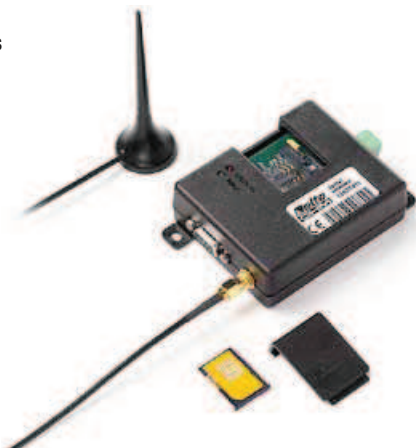


TEMPERATURE PROBES


TP32MT.1P: 4-wire 1/3 DIN Pt100 temperature probe, Ø 4mm, L=150mm, pointed, 5m cable, isolated sensor. Temperature working range -40...+100°C.

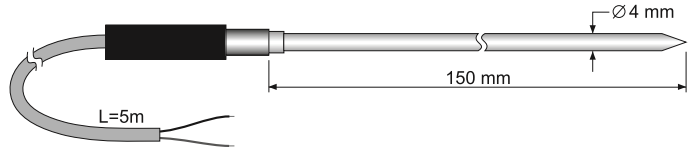


TP32MT.2: 4-wire 1/3 DIN Pt100 temperature probe, Ø 6mm, L=150mm, 5m cable, isolated sensor. Temperature working range -40...+100°C.

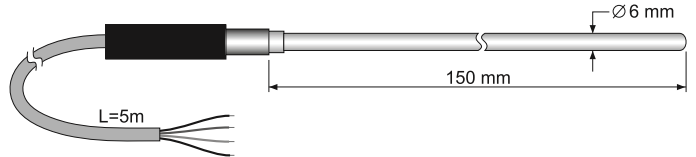

TP32MT.11P: T type thermocouple temperature probe, Ø 4mm, L=150mm, pointed, 5m cable, isolated. Temperature working range -40...+100°C.

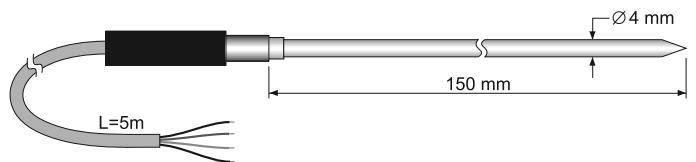


TP32MT.12: T type thermocouple temperature probe, Ø 4mm, L=300mm, 5m cable, isolated. Temperature working range -40...+100°C.

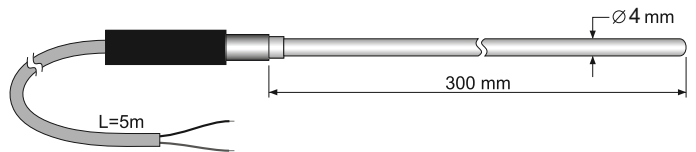

TEMPERATURE PROBE FOR SOLAR PANELS TP878.1SS

TP878.1SS: CONTACT PROBE FOR SOLAR PANELS, Pt100 4-wire. Cable 5m. Temperature working range +4°C...+85°C.

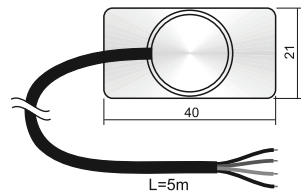

Архангельск (8182)63-90-72	Ижевск (3412)26-03-58	Магнитогорск (3519)55-03-13	Пермь (342)205-81-47	Сургут (3462)77-98-35
Астана (7172)727-132	Иркутск (395)279-98-46	Москва (495)268-04-70	Ростов-на-Дону (863)308-18-15	Тверь (4822)63-31-35
Астрахань (8512)99-46-04	Казань (843)206-01-48	Мурманск (8152)59-64-93	Рязань (4912)46-61-64	Томск (3822)98-41-53
Барнаул (3852)73-04-60	Калининград (4012)72-03-81	Набережные Челны (8552)20-53-41	Самара (846)206-03-16	Тула (4872)74-02-29
Белгород (4722)40-23-64	Калуга (4842)92-23-67	Нижний Новгород (831)429-08-12	Санкт-Петербург (812)309-46-40	Тюмень (3452)66-21-18
Брянск (4832)59-03-52	Кемерово (3842)65-04-62	Новокузнецк (3843)20-46-81	Саратов (845)249-38-78	Ульяновск (8422)24-23-59
Владивосток (423)249-28-31	Киров (8332)68-02-04	Новосибирск (383)227-86-73	Севастополь (8692)22-31-93	Уфа (347)229-48-12
Волгоград (844)278-03-48	Краснодар (861)203-40-90	Омск (3812)21-46-40	Симферополь (3652)67-13-56	Хабаровск (4212)92-98-04
Вологда (8172)26-41-59	Красноярск (391)204-63-61	Орел (4862)44-53-42	Смоленск (4812)29-41-54	Челябинск (351)202-03-61
Воронеж (473)204-51-73	Курск (4712)77-13-04	Оренбург (3532)37-68-04	Сочи (862)225-72-31	Череповец (8202)49-02-64
Екатеринбург (343)384-55-89	Липецк (4742)52-20-81	Пенза (8412)22-31-16	Ставрополь (8652)20-65-13	Ярославль (4852)69-52-93
Иваново (4932)77-34-06	Киргизия (996)312-96-26-47	Казахстан (772)734-952-31	Таджикистан (992)427-82-92-69	

Единый адрес для всех регионов: dmh@nt-rt.ru || www.deltaohm.nt-rt.ru